


This Guide is for all Truck Guard Models, including (where applicable):
Aero
Defender
Texas
Big Texas
Road Train
Super Road Train

Thank you for choosing HERD!

For assistance call 1-888-543-4373

www.HERD.com

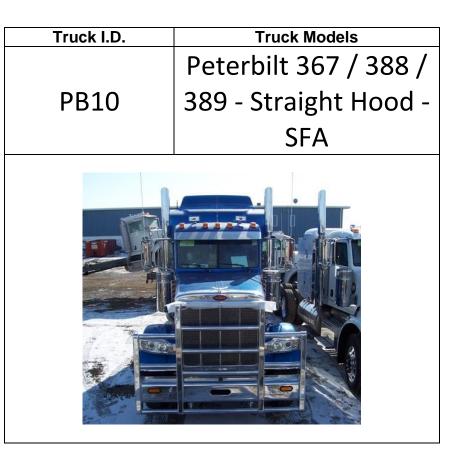

Important

- Herd Truck Guards are vehicle "Make & Model" specific. Use of a Truck Guard on a vehicle other than the model it was designed for will constitute improper use of the product and may void warranty.
- Unless otherwise specified, Grade 8 or Class 10.9 hardware is to be used. For the purposes of these instructions, OE hardware means the truck's original factory hardware.
- For further detail of warranty coverage and warranty repair information visit <u>www.HERD.com</u>.

General Safety

- Take time to fully read the instructions before installing the Herd Truck Guard.
- At all times exercise safe work shop practices, wear steel toe boots and safety glasses during installation.
- Parts and components of the Herd Truck Guard can be heavy, handle with care to avoid injuries.
- Respect power tools and use them as advertised.

HERD North America Inc. 2168 Springfield Road Box 28, Group 525, RR5 Sunnyside, MB Canada R5R 0J3

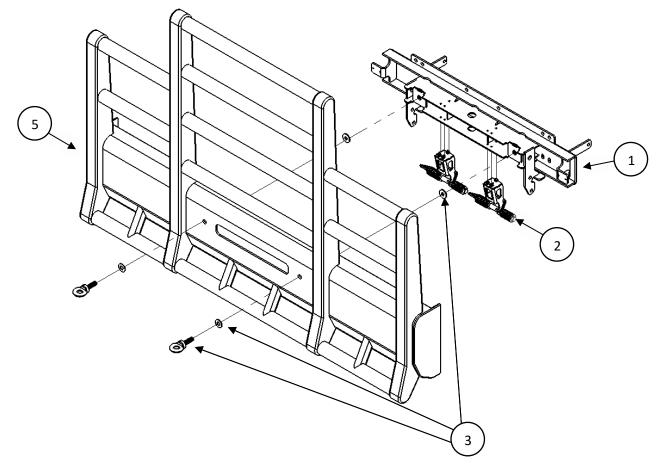


Figure 1 – Captive Eye Bolt Latching System

Item No	Part No	Description	Qty
1	BR-PB10-AT (Only with Aero, Road Train, Super Road Train, Texas, & Big Texas Versions) Or BR-PB10-FLT (Only with Defender Version)	BRACKET, PETERBILT, 367 / 388 / 389 - Straight Hood - SFA	1
2	1MPA027 (Only with Aero, Road Train, Super Road Train, Texas, & Big Texas Versions) Or 1MPA024 (Only with Defender Version)	ASSY - LEGACY LIFT ASSIST	2
3	7-EYEBOLT KIT	CAPTIVE EYEBOLT ASSEMBLY	2
5	HERD TRUCK GUARD	TRUCK GUARD APPEARANCE MAY VARY BY SKU	1
*6	500086	BOLT-HEX 1/2-13X2 NC GR8 YZP	4
*7	500167	NUT-NYLOCK 1/2-13 NC GR8 YZP	4
*8	500206	WASHER-FLAT 1/2 SAE GR8 YZP	8
*9	500120	BOLT-HEX 5/8-11X2-1/2 NC GR8 YZP	4
*10	500176	NUT-NYLOCK 5/8-11 NC GR8 YZP	4
*11	500214	WASHER-FLAT 5/8 SAE GR8 YZP	8

Items marked with * are not shown in Figure 1 above

Reference this Parts List if your Truck Guard has a Slam Latch Latching System

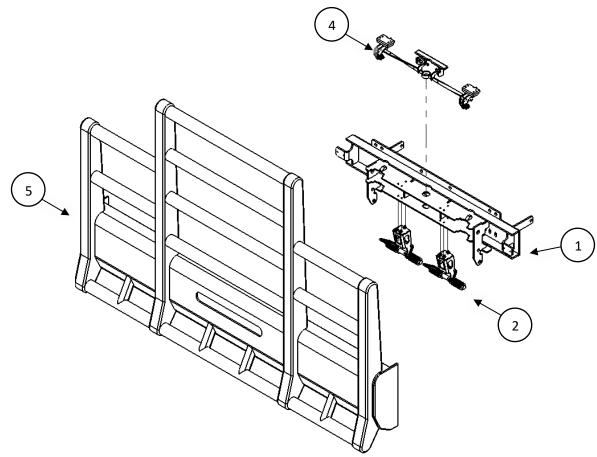
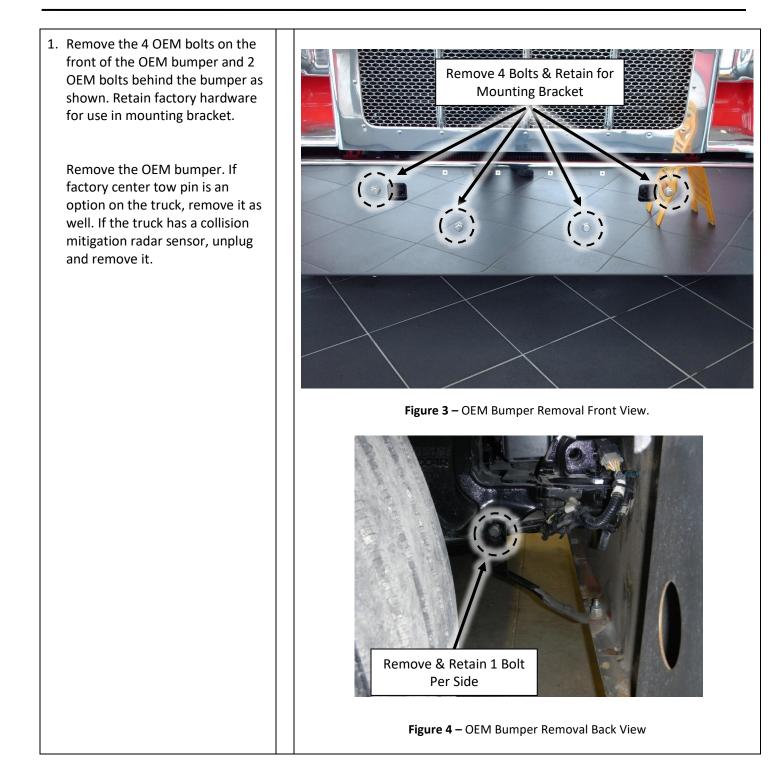
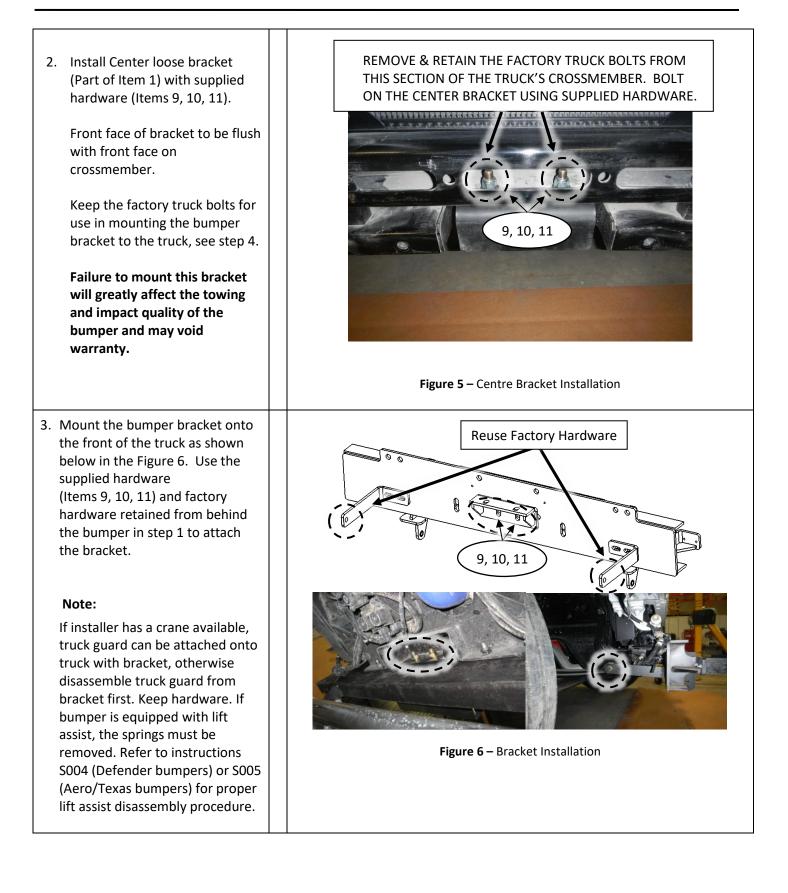



Figure 2 – Slam Latch Latching System

Item No	Part No	Description	Qty
1	BR-PB10-AT-SL (Only with Aero, Road Train, Super Road Train, Texas, & Big Texas Versions) Or BR-PB10-FLT-SL (Only with Defender Version)	BRACKET, PETERBILT, 367 / 388 / 389 - Straight Hood - SFA	1
2	1MPA027 (Only with Aero, Road Train, Super Road Train, Texas, & Big Texas Versions) Or 1MPA024 (Only with Defender Version)	ASSY - LEGACY LIFT ASSIST	2
4	4-MC-SLA-A	ASSY- LEGACY SLAM LATCH	1
5	HERD TRUCK GUARD	TRUCK GUARD APPEARANCE MAY VARY BY SKU	1
*6	500086	BOLT-HEX 1/2-13X2 NC GR8 YZP	4
*7	500167	NUT-NYLOCK 1/2-13 NC GR8 YZP	4
*8	500206	WASHER-FLAT 1/2 SAE GR8 YZP	8
*9	500120	BOLT-HEX 5/8-11X2-1/2 NC GR8 YZP	4
*10	500176	NUT-NYLOCK 5/8-11 NC GR8 YZP	4
*11	500214	WASHER-FLAT 5/8 SAE GR8 YZP	8

Items marked with * are not shown in Figure 2 above





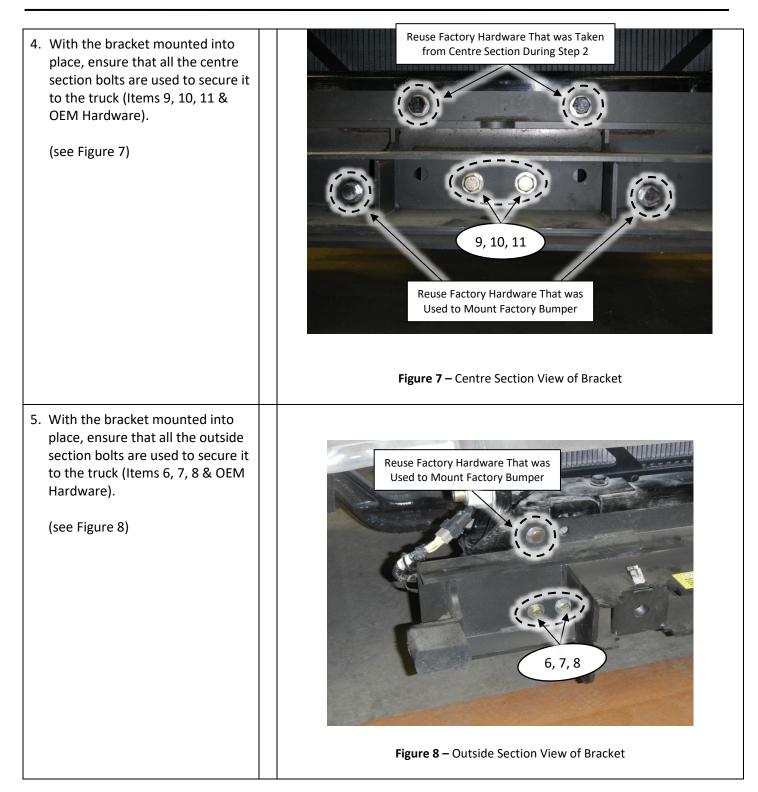

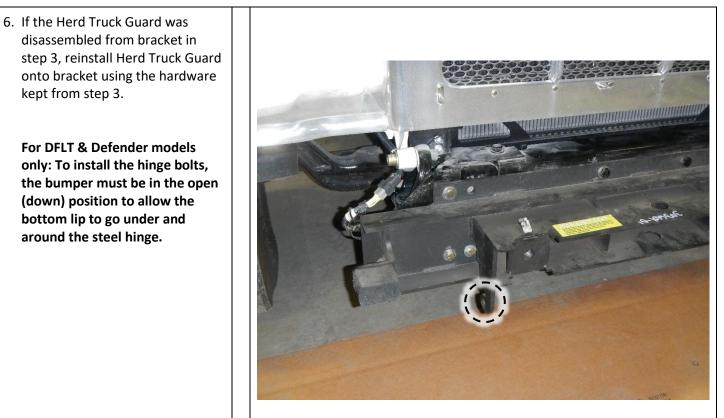


Figure 9 – View of Bracket Hinge

 Close the truck guard and check fitment. Truck guard position can be adjusted side to side and up or down as required. Once fitment is confirmed, tighten all mounting bolts. Torque 3/4" hardware to 150lb-ft. Torque 1/2" and 5/8" hardware to 110lb-ft.



Figure 10 – Herd Truck Guard Installed

Important

- Check mounting points after the first 5000 km and every 3-6 months.
- If this truck guard is equipped with Legacy Herd Slam Latch, periodic adjustment is required. Refer to Legacy Slam Latch Installation adjustment instructions to properly adjust your Slam Latch.
- The drop-forged eyebolts are an integral part of the strength of Herd Truck Guards. When tightened firmly, they will minimize vibration and provide superior impact resistance.
- To help maintain the factory finish, avoid acid wash.