


Thank you for choosing HERD!

For assistance call 1-888-543-4373 www.HERD.com

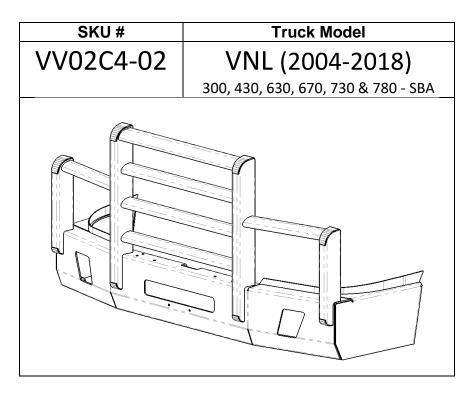

Important

- Herd Bumpers are vehicle "Make & Model" specific. Use of a bumper on a vehicle other than the model it was designed for will constitute improper use of the product and may void warranty.
- Unless otherwise specified, Grade 8 or Class 10.9 hardware is to be used. For the purposes of these instructions, OE hardware means the truck's original factory hardware.
- For further detail of warranty coverage and warranty repair information visit <u>www.HERD.com</u>.

General Safety

- Take time to fully read the instructions before installing the Herd bumper.
- At all times exercise safe work shop practices, wear steel toe boots and safety glasses during installation.
- Parts and components of the Herd bumper can be heavy, handle with care to avoid injuries.
- Respect power tools and use them as advertised.

HERD North America Inc. 2168 Springfield

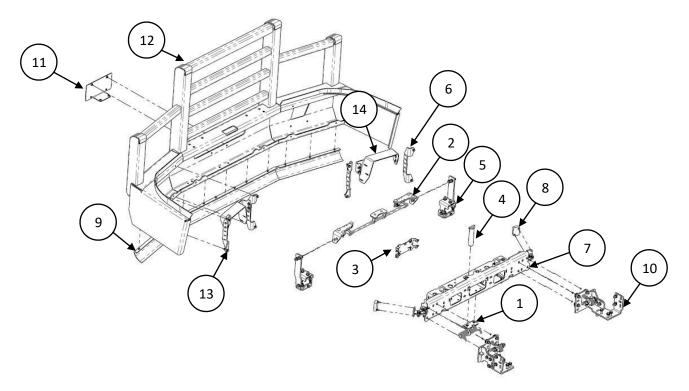



Figure A – VV02C4-02 Bill of Materials


Parts and Hardware Included


Item No.	Part No	Description	Qty
1	100021	ASSY-LIFT ASSIST	1
2	100027	C4 SLAM LATCH ASSEMBLY	1
3	100046	KIT-CAS BRACKET	1
4	100049	WLDMT-TOW PIN	1
5	100054	ASSY-HINGE	1
6	100058	KIT-CHANNEL STRUT	4
7	100062	ASSY-UNIVERSAL BRACKET	1
8	400014	KIT-RUMBER 20 MM	2
9	400033	KIT-AIR DEFLECTOR VV02	1
10	1V5038	KIT-MOUNTING VV02 VV05	1
11	2F0025	BRKT-LICENSE PLATE KIT	1
12	2V0058	WLDMT-BUMPER VV02	1
13	2V0070	KIT-OEM LIGHT BRACKET VV02 DS	1
14	2V0072	KIT-OEM LIGHT BRACKET VV02 PS	1
*15	500095	BOLT-HEX 1/4-20X1 NC GR5 WZP	12
*16	500208	WASHER-FLAT 1/4 SAE GR8 YZP	24
*17	500169	NUT-NYLOCK 1/4-20 NC GR8 YZP	12
*18	500085	BOLT-HEX 1/2-13X1-3/4 NC GR8 YZP	18
*19	500206	WASHER-FLAT 1/2 SAE GR8 YZP	40
*20	500167	NUT-NYLOCK 1/2-13 NC GR8 YZP	18
*21	500263	WASHER-FLAT 1/2X1-1/2OD 1/4THICK	12
*22	500106	BOLT-HEX 3/4-10X4-1/2 NC GR8 YZP	2
*23	500172	NUT-NYLOCK 3/4-10 NC GR8 YZP	2
*24	500211	WASHER-FLAT 3/4 SAE GR8 YZP	4
*25	500238	NUT-NYLON NO 14 LICENSE PLATE	6
*26	500250	SCREW-HEX SLOT FLANGE 14X1/2 18-8SS TYPE A	6
*27	500141	BOLT-HEX M12X1.75X60 CL10.9 YZP	6
*28	500289	NUT-NYLOCK M12X1.75 CL10.9 WZP	6
*29	500310	BOLT-HEX 7/16-14X1-3/4 NC GR8 YZP	4
*30	500311	WASHER-FLAT 7/16 SAE GR8 YZP	8
*31	500312	NUT-NYLOCK 7/16-14 NC GR8 YZP	4

Items marked with * are not shown in Figure A above.


Part No: VV02C4-02-IG Rev: B Date: 08-May-19 ECN: 19-024

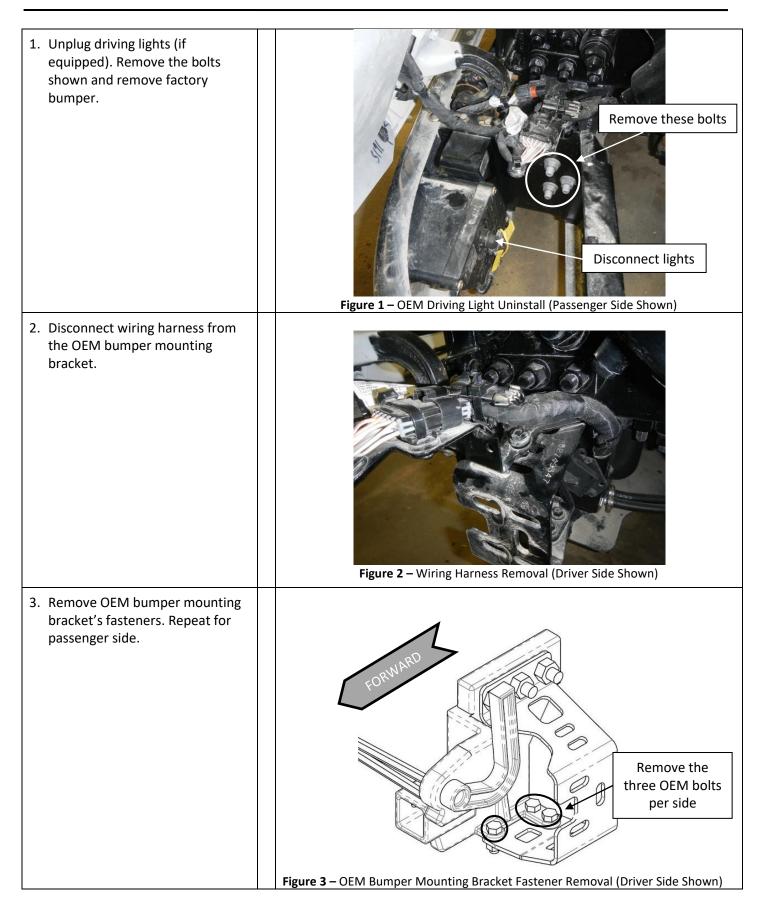


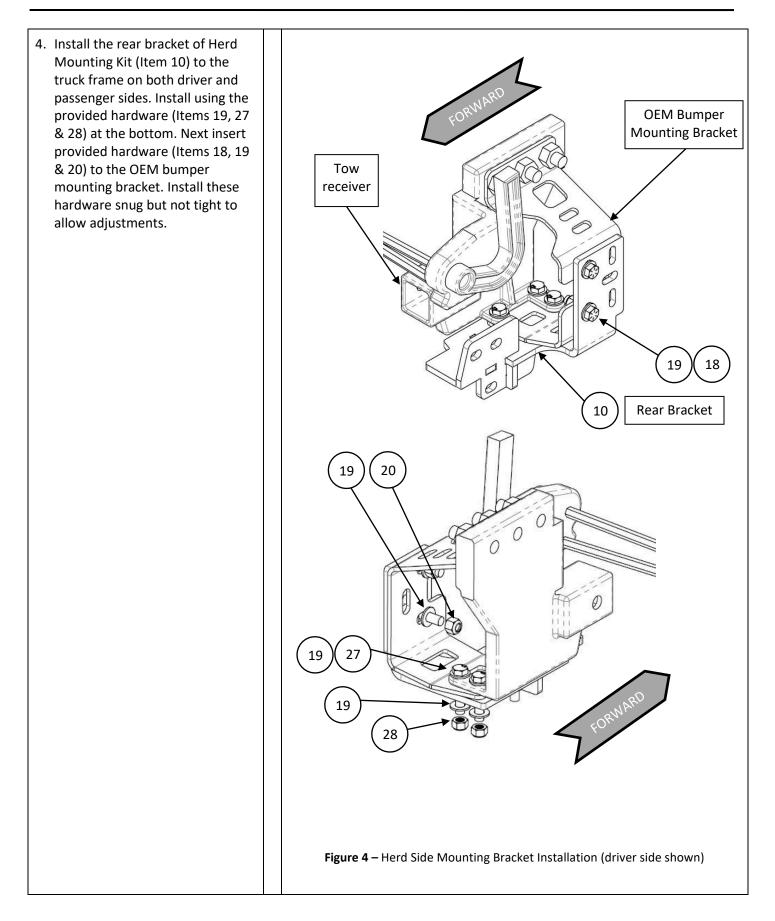

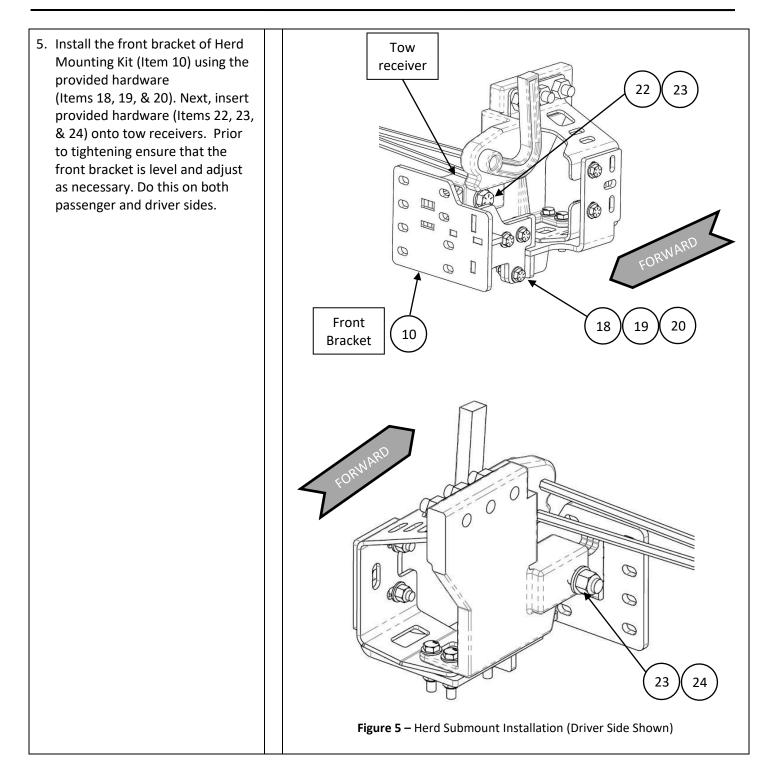



6. Open bumper by pulling on the handle. Using a crane, lift the bumper (Item 12) and universal bracket (Item 7) and attach to Herd submounts (Item 10). Make sure to install at the upper set of mounting holes on Herd submounts (Item 10) as shown. Note: If installer does not have a crane available, bumper can be disassembled from the universal bracket to simplify installation as shown in step 7, otherwise proceed to step 8. Step 7 12 Figure 6 – Universal Bracket Installation (Driver Side Shown)

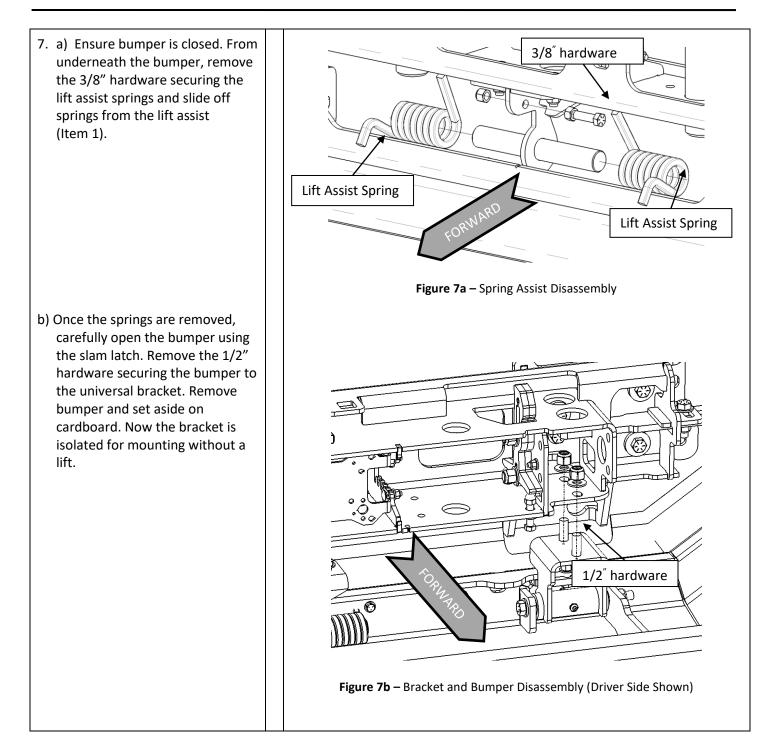


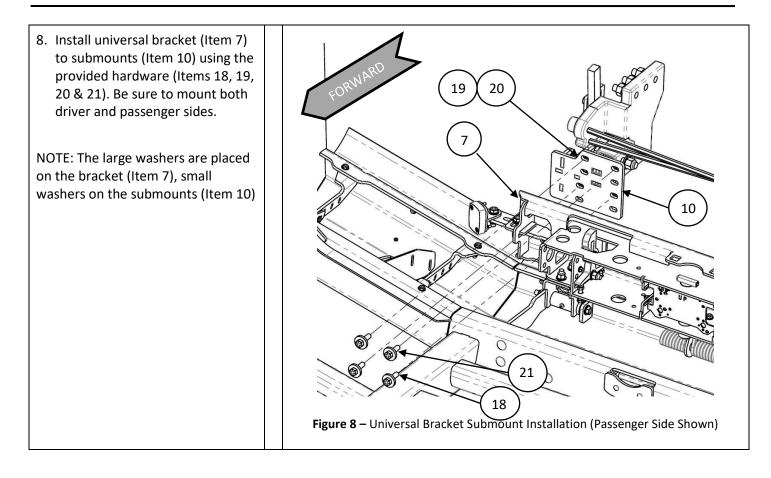


9. If bumper was disconnected from the universal bracket in step 7, reverse the procedure to mount bumper back onto the bracket. a) First ensure the bumper hinges are open. b) Attach using previously removed 1/2" bolts until the hinge just slightly touches the bracket. c) Close the bumper and ensure the latch engages. d) Open the bumper and tighten the bolts until they are snug. e) Close the bumper again to ensure the latches engage O properly. f) Fully tighten the ½" hardware to 110 ft·lb. Latches may need to be adjusted, refer to Slam Latch Figure 9.1 – Bracket and Hinge Reassembly Adjustment guide (S012). g) Close the bumper and slide springs onto the lift assist shaft, ensuring that spring arms are inserted into slots of bumper. Reinsert 3/8" hardware securing the lift assist springs. Figure 9.2 - Lift Assist Reassembly

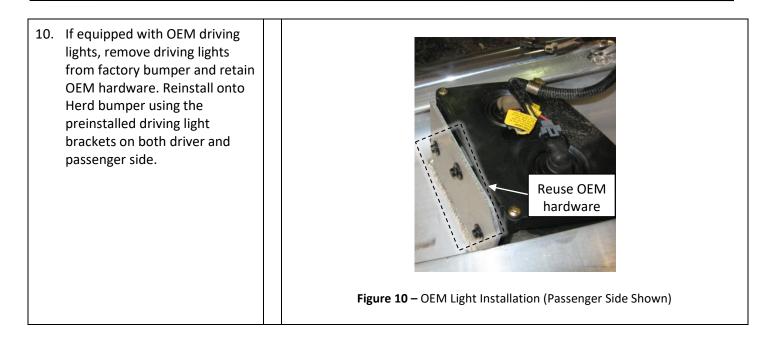

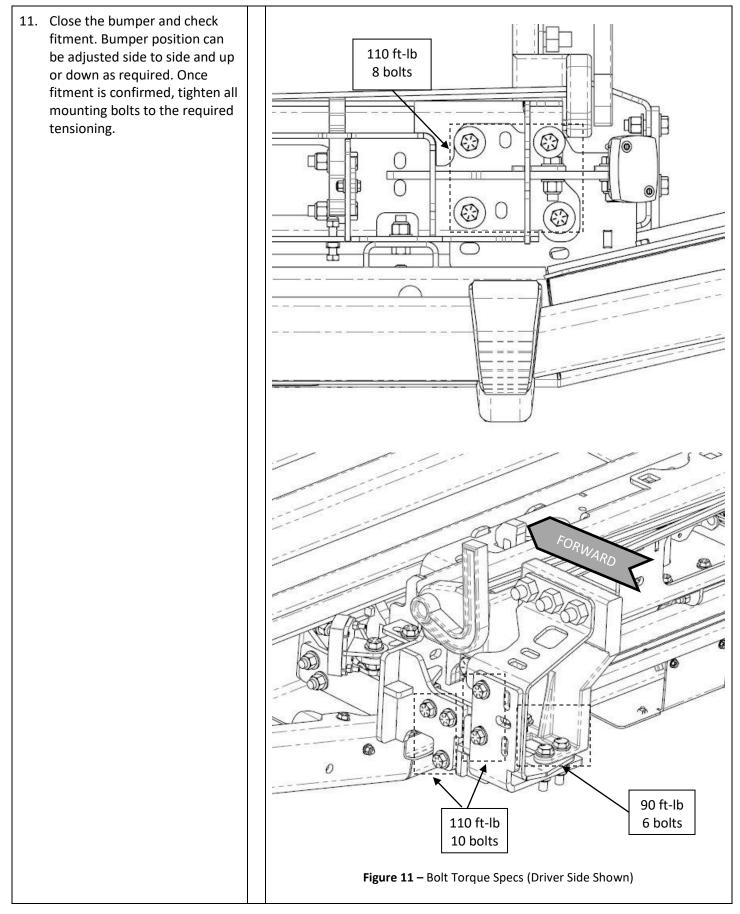

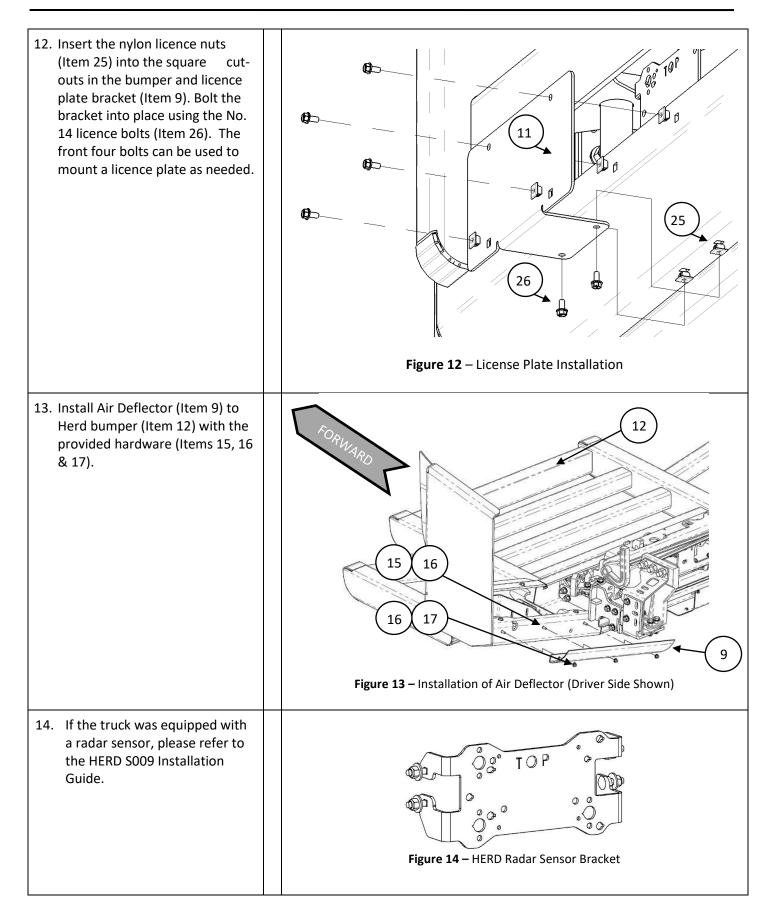

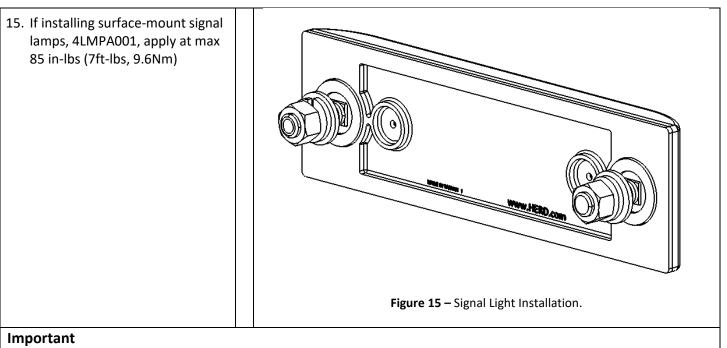

- Check mounting points after the first 5000 km and every 3-6 month.
- This bumper is equipped with Herd Slam Latch which requires periodic adjustment. Refer to Slam Latch Installation adjustment instructions (S001) to properly adjust your Slam Latch.