


Thank you for choosing HERD!

For assistance call
1-888-543-4373
HERD.com

Part #	Product
3MCA001	FL50GG Hood Strap Kit

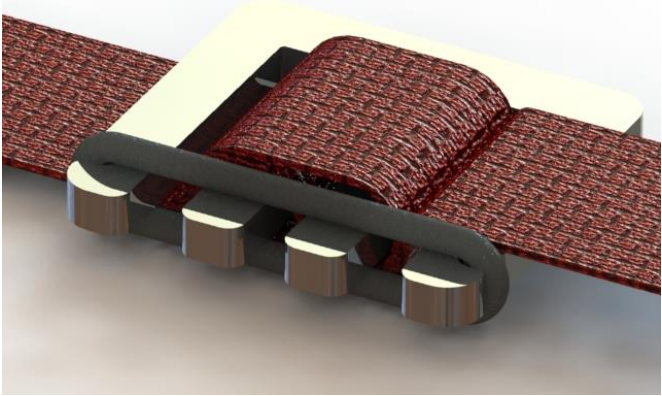

Important

- HERD guards are vehicle "Make & Model" specific. Use of a HERD guard on a vehicle other than the model it was designed for will constitute improper use of the product and may void warranty.
- Unless otherwise specified, Grade 8 or Class 10.9 hardware is to be used. For the purposes of these instructions, OE hardware means the truck's original factory hardware.
- For further detail of warranty coverage and warranty repair information visit HERD.com.


General Safety

- Take time to fully read the instructions before installing the HERD guard.
- At all times exercise safe work shop practices, wear steel toe boots and safety glasses during installation.
- Parts and components of the HERD guard can be heavy, handle with care to avoid injuries.
- Respect power tools and use them as advertised.

HERD North America Inc.
2168 Springfield Road
Box 28, Group 525, RR5
Winnipeg, MB. Canada R2C 2Z2

Parts and tools referenced in this instruction

This kit is intended for use on the Freightliner Cascadia 2018+, the intention of the kit is to reduce the amount that the truck hood opens. Some HERD Grill Guards manufactured in 2017 may experience interference between the hood and the grill guard hinges when fully opened. Installing the kit will prevent this.

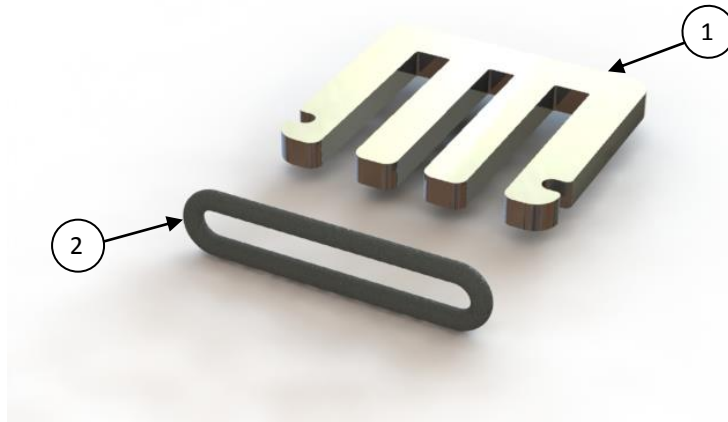

Parts and hardware included

Item No	Part No	Description	Qty
1	3MC007	STRAP CLIP	1
2	94115K21	REFRIGERANT RESISTANT O-RING	1

Tools Required

Tool	Specification
NA	NA

Installation Procedure

1. Install hood strap clips **before** beginning grill guard installation.
2. (Optional) Remove strap from hood and radiator frame.
3. Fold hood strap to make figure 8 shape (Item 1). The shape should be able to fit the clip prongs (Items 2 and 3).

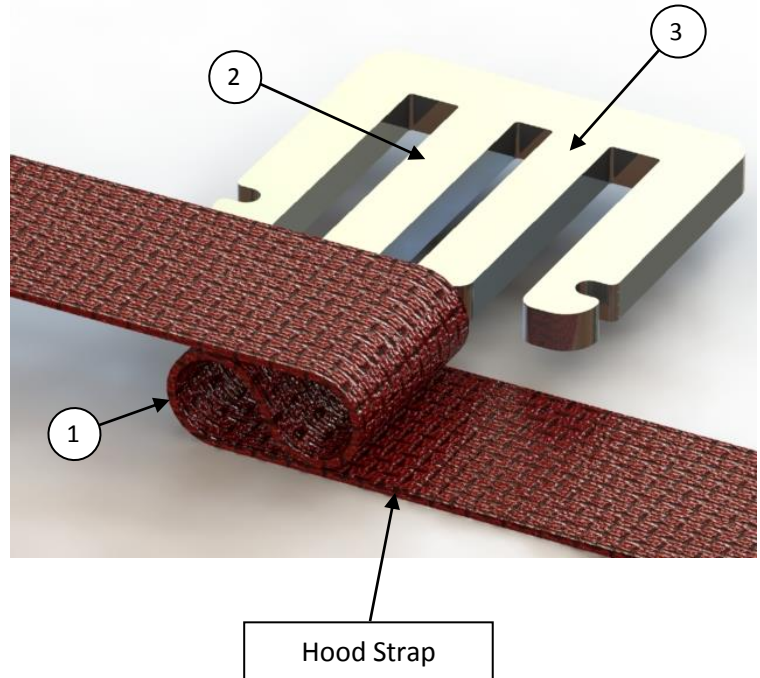


Figure 1 – Hood strap kit installation.

4. Fold tag ends (Items 1 and 2) of strap to clear top (Item 3) and bottom (Item 4) of the clip (Item 5) as you slide clip prongs into the loops (Item 6) you have formed.

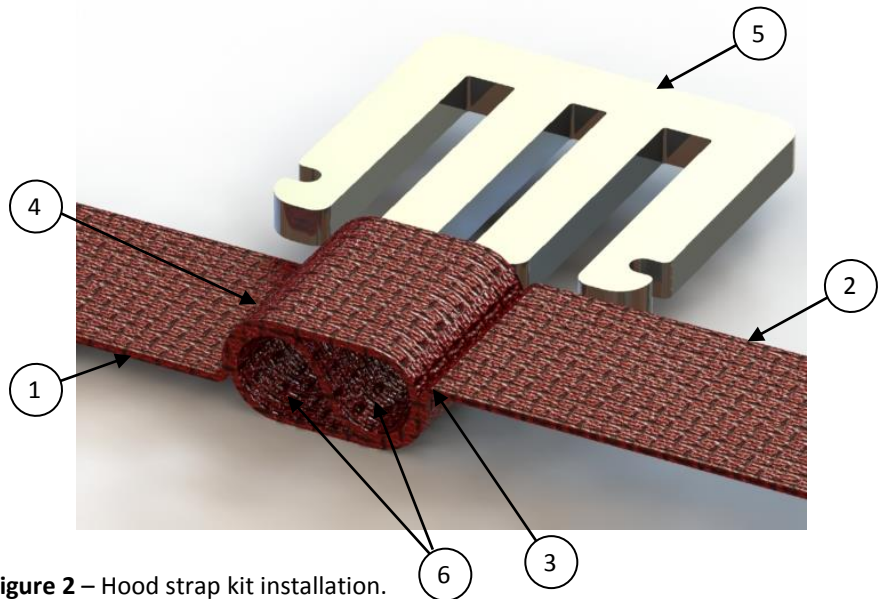


Figure 2 – Hood strap kit installation.

Installation Procedure

5. Insert clip (Item 1) all the way onto the strap (Item 2). Ensure that the clip is inserted far enough to clear the o-ring grooves (Item 3).

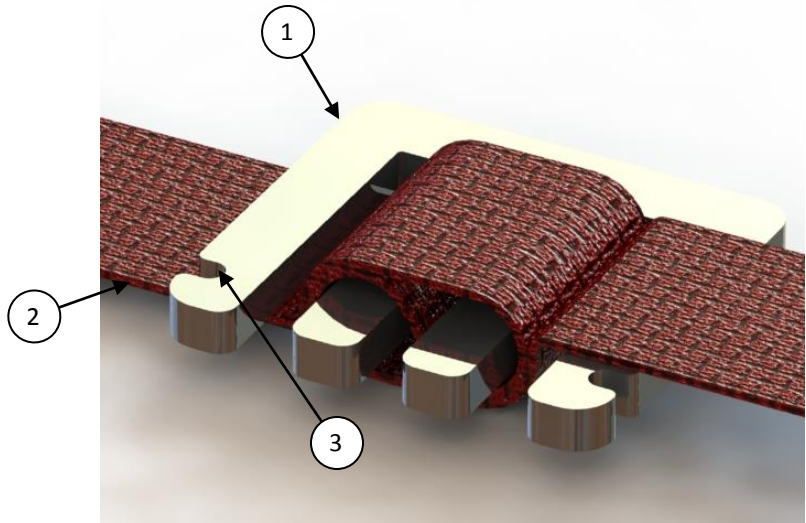


Figure 3– Hood strap kit installation.

6. Stretch o-ring (Item 1) onto the clip to seat in the o-ring grooves.

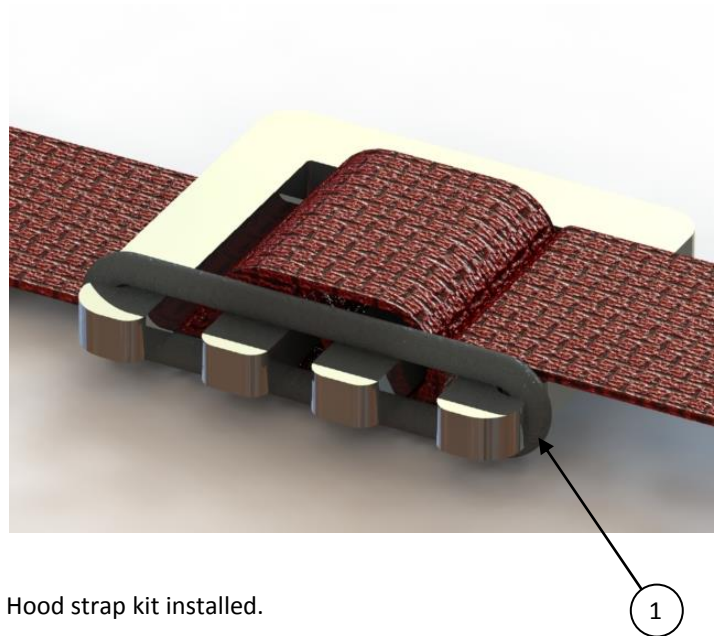


Figure 4– Hood strap kit installed.