




# INSTALLATION INSTRUCTIONS

## PETERBILT

| Item # | Vehicle Description |
|--------|---------------------|
| PB05   | Peterbilt 387       |

### **IMPORTANT**

- A** Herd Bullbars are vehicle "Make & Model" specific. Use of a bullbar on a vehicle other than the model it was designed for will constitute improper use of the product and may void warranty.
- B** Unless otherwise specified, Grade 8 hardware is to be used. For the purposes of these instructions, OE hardware means the truck's original factory hardware.
- C** The drop-forged eyebolts are an integral part of the strength of Herd bullbars. When tightened firmly, they will minimize vibration and provide superior impact resistance.
- D** To help maintain the factory finish, avoid acid wash.

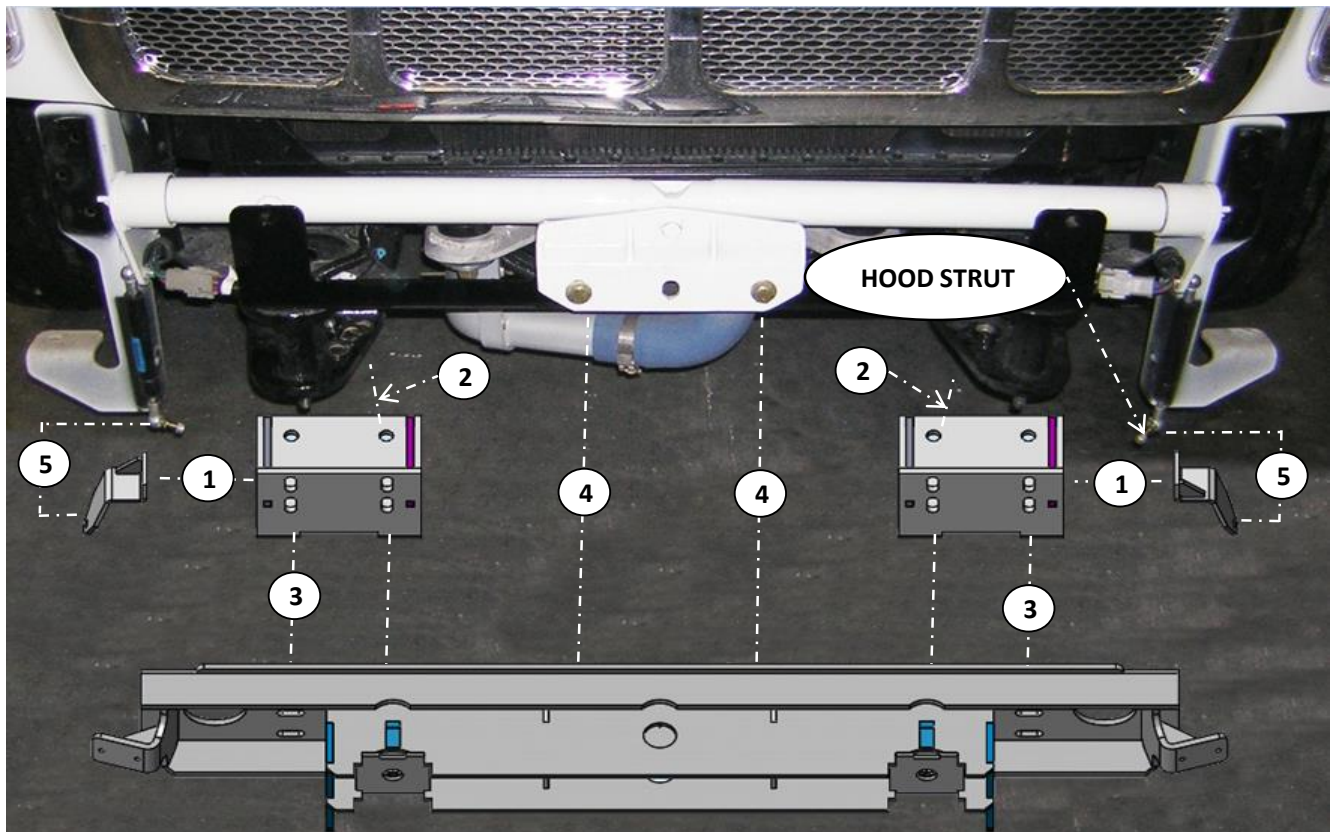

## Step

- 1 ***Remove factory bumper***
- 2 ***Remove mounting bracket for hood cylinder support***
- 3 ***Bolt Herd hood strut brackets to sub-mounts using supplied hardware (item 1)***
- 4 ***Bolt Herd steel bracket to sub-mounts using supplied hardware (item 3)***
- 5 ***Bolt Herd steel bracket via sub-mounts to truck using OE hardware (item 2)***
- 6 ***Install Herd steel bracket to truck using supplied hardware and spacers in 2 locations (item 4)***
- 7 ***Verify that all mounting locations are used***
- 8 ***Attach bullbar to bracket using Herd supplied hinge bolts***  
***\* For DFLT & Defender models only: To install the hinge bolts, the bumper must be in the open (down) position to allow the bottom lip to go under and around the steel hinge.***
- 9 ***Check to ensure bar is level relative to a significant feature of the truck, and readjust if necessary***
- 10 ***Attach hood cylinder support on Herd hood strut bracket using OE hardware (item 5)***
- 11 ***Wire driving lights to existing wiring (if applicable)***
- 12 ***Insert towpin and tighten eyebolts (75-100 ft-lbs)***
- 13 ***Re-check the mounting bracket and bolts after the first 5,000km and every 3-6 months.***

***Eyebolts are secured in the channel with a 7/8" rubber washer. If you need to re-install the washer, insert the eyebolt into the hole, and thread a washer onto the back side of the eyebolt, approximately halfway onto the threaded part of the eyebolt.***